


DO NOT STAND ON TOP OF CABINETS

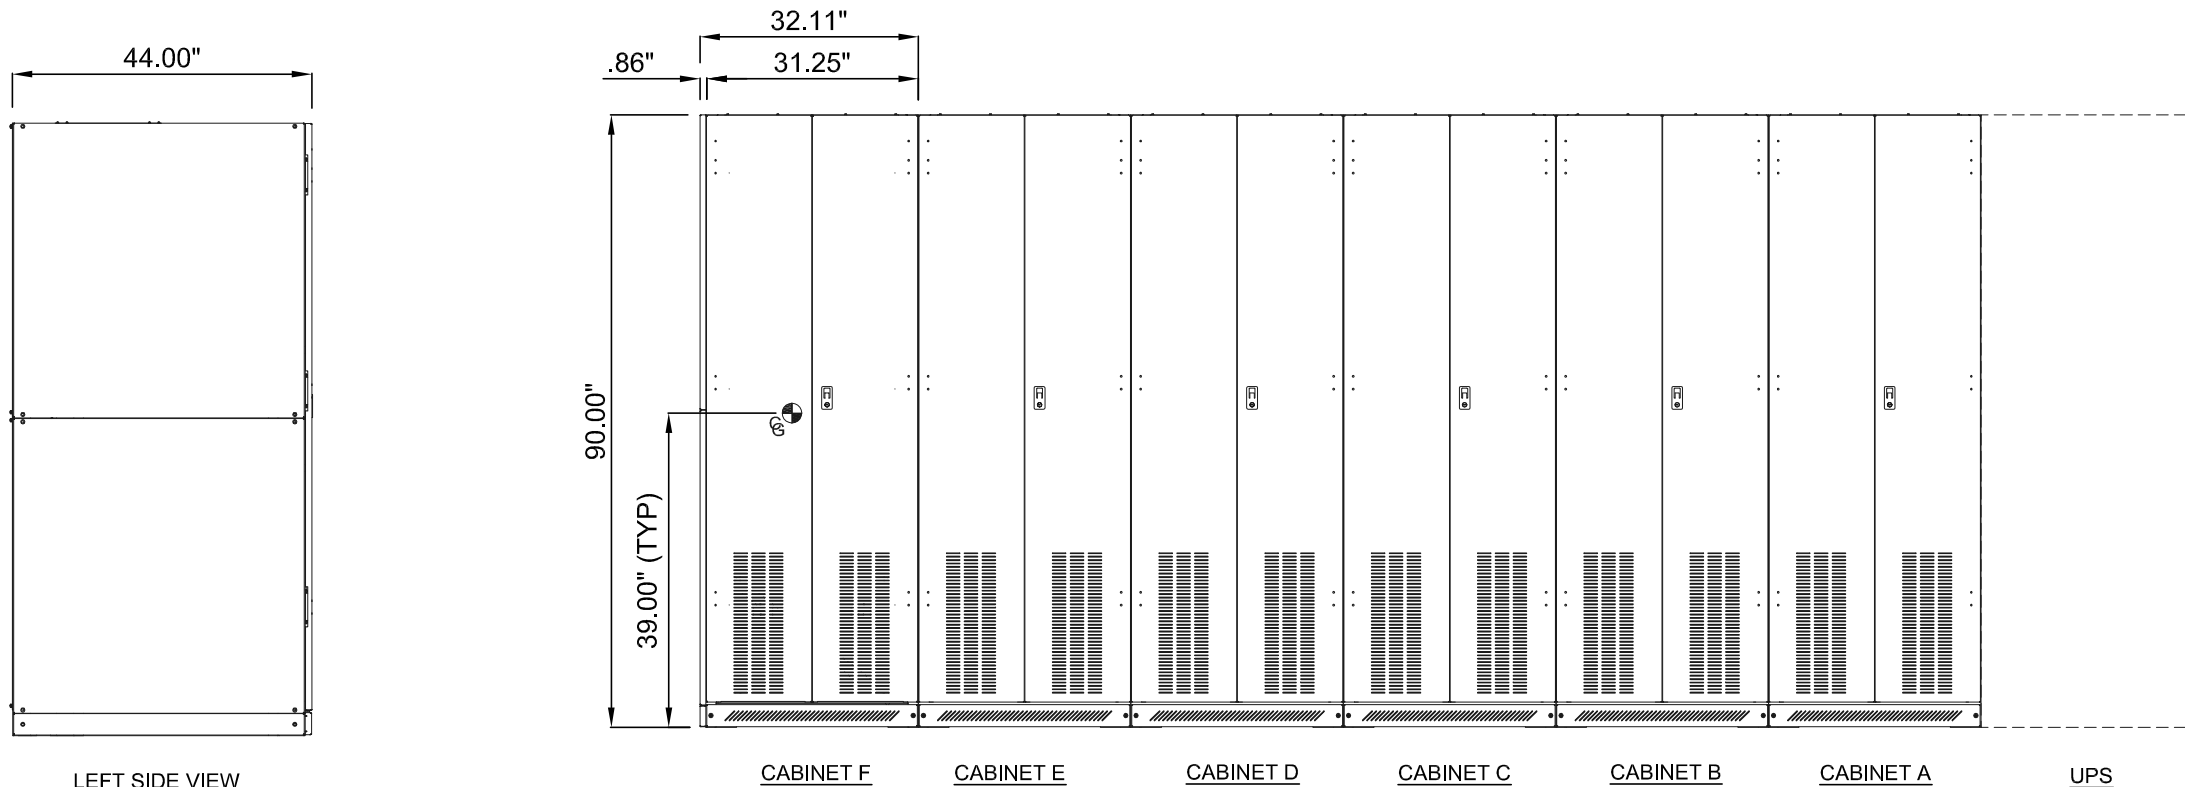

LEFT SIDE VIEW

CABINET F CABINET E CABINET D CABINET C CABINET B CABINET A UPS

BATTERY CABINET SYSTEM LINEUP

FRONT VIEW

STEPS FOR BATTERY CABINET INSTALLATION PROCEDURE

1. RECOMMEND INSTALLING THE UPS FIRST IN ITS FINAL LOCATION. (REFER TO MGE INSTALLATION MANUAL AND INSTALLATION DRAWINGS).
2. TO HELP PREVENT DAMAGE, ALL PANELS FROM ALL BATTERY CABINETS SHOULD BE REMOVED AND PUT ASIDE IN A SAFE LOCATION WHILE MOVING THE CABINETS TO FINAL INSTALL POSITION.
3. INSTALL THE FIRST CABINET AS CLOSE AS POSSIBLE TO THE LEFT SIDE OF THE UPS THEN ADJACENT TO EACH OTHER. STARTING FROM THE RIGHT AND WORKING TO THE LEFT, THE BATTERY CABINETS SHOULD BE BOLTED TOGETHER.
4. ROUTE THE POWER CABLES AS SHOWN ON SHEET 5 OF 7.
5. INSTALL SIDE PANEL ONTO THE LEFT SIDE OF FAR LEFT BATTERY CABINET (LAST CABINET ON LEFT IN SERIES).
6. THE CABINET MUST BE ANCHORED TO THE FLOOR FOR SEISMIC SENSITIVE AREAS. ANCHORING HARDWARE IS NOT INCLUDED. CONTACT INTRAPACK TO PURCHASE ANCHORING HARDWARE

CAUTION:

CABINETS HAVE HIGH CENTER OF GRAVITY. HANDLE WITH CARE.


CABINET SYSTEMS ARE HEAVY AND COULD WEIGH AS MUCH AS 5,500 LBS PER CABINET

CAUTION: HIGH VOLTAGE, RISK OF ELECTRICAL SHOCK

- FOLLOW ALL SAFETY PRECAUTIONS WHEN WORKING ON THIS SYSTEM
- ALWAYS WEAR PROPER SAFETY EQUIPMENT INCLUDING EYE PROTECTION

* AFTER REVIEWING THIS DRAWING, IF QUESTIONS REMAIN: CONTACT INTRAPACK.

| | | | |
|---------------------------------|----------|---|--|
| MARKETING NO. | | MGESM-24012V-480-6-6D-A-MECH-ILS | |
| DRAWING SIZE: B NOT TO SCALE | |  10817 SANDEN DRIVE DALLAS, TX. 75238 PHONE: 214-348-7105 FAX: 214-348-7115 EMAIL: SALES@INTRAPACK.COM | |
| DRAWN BY | DATE | DESCRIPTION ADJACENT BATTERY CABINET | |
| DBC | 12/23/08 | | |
| APPR. | DATE | | |
| SHEET 1 OF 2 | | DRAWING NO. MGESM-24012V-480-6-6D-A-MECH-ILS | |
| | | REV. 01 | |

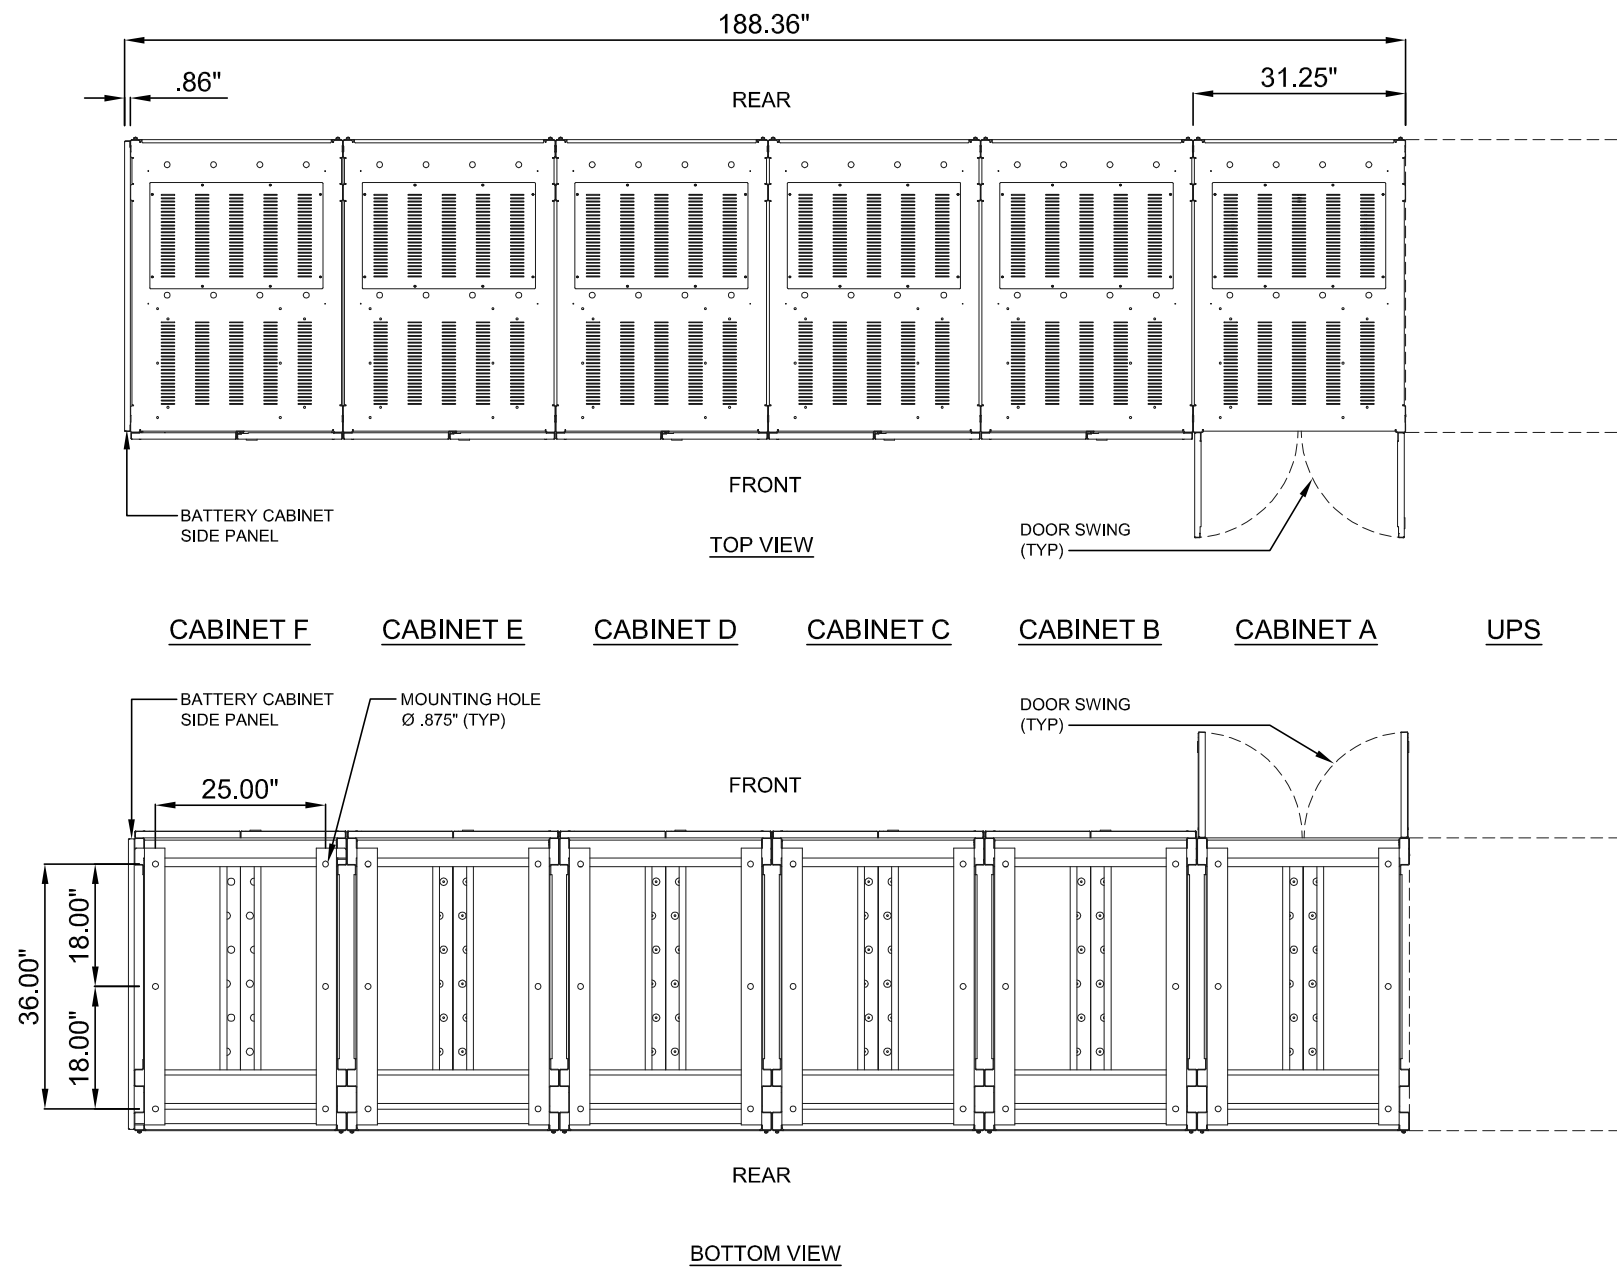

BATTERY CABINET SYSTEM LINEUP

CAUTION: HIGH VOLTAGE, RISK OF ELECTRICAL SHOCK

- FOLLOW ALL SAFETY PRECAUTIONS WHEN WORKING ON THIS SYSTEM
- ALWAYS WEAR PROPER SAFETY EQUIPMENT INCLUDING EYE PROTECTION

CAUTION:

CABINETS HAVE HIGH CENTER OF GRAVITY. HANDLE WITH CARE.

CABINET SYSTEMS ARE HEAVY AND COULD WEIGH AS MUCH AS 5,500 LBS PER CABINET

*** AFTER REVIEWING THIS DRAWING, IF QUESTIONS REMAIN: CONTACT INTRAPACK.**

| | | | |
|---------------------------------|----------|---|-------------------|
| MARKETING NO. | | MGE5M-24012V-480-6-6D-A-MECH-ILS | |
| DRAWING SIZE: B NOT TO SCALE | |  10817 SANDEN DRIVE DALLAS, TX. 75238 PHONE: 214-348-7105 FAX: 214-348-7115 EMAIL: SALES@INTRAPACK.COM | WWW.INTRAPACK.COM |
| DRAWN BY | DATE | | |
| DBC | 12/23/08 | DESCRIPTION ADJACENT BATTERY CABINET | |
| APPR. | DATE | | |
| SHEET 2 OF 2 | | DRAWING NO. MGE5M-24012V-480-6-6D-A-MECH-ILS | |
| | | REV. 01 | |